

## INSTALL JUMPERS TO ENABLE DESIRED SIGNALS

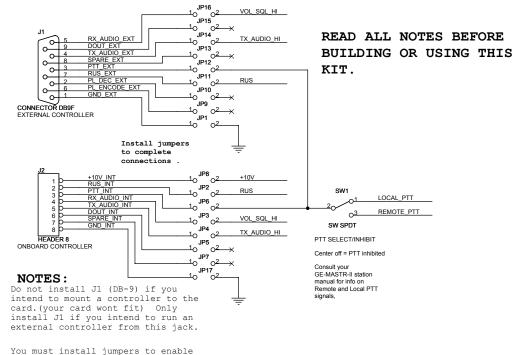


## CARD EDGE FINGERS

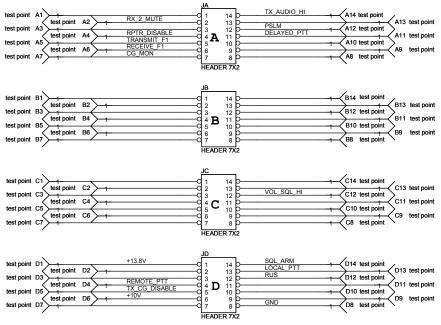

Consult the GE MASTR-II Station manual for signals not listed.

## Controller mounting holes



NOTICE
THIS DRAWING CONTAINS
PROPRIETARY INFORMATION WHICH
IS THE CONFIDENTIAL PROPERTY
OF NHRC LLC. IT SHALL NOT BE
COPIED, REPRODUCED, DISCLOSED,
PUBLISHED OR USED IN PART OR
WHOLE WITHOUT THE EXPRESSOR
WITTEN PERMISSION OF NHRC LLC.
SPECIFICATIONS SUBJECT TO CHANGE
WITHOUT TOTICE OR OBLIGATION.

## 

GE-MASTR II Station Manual to identify these signals.

J1 or J2 Use 22 awg hookup wire to connect the signals as desired

The signals required for a repeater are noted on this drawing and wired for convenient access. All other signals are brought out to a test point for user access. Consult the

for your intended use.

Insert card into far right hand "AUX CONTROL" slot J1212 for repeater control applications.

Holes in a grid pattern are provided for the customers convenience.

Cards that have been soldered are not returnable.